

# **ACHL Series Pump**

Air Driven, Hand Operated High Pressure Liquid Pump Operation and Maintenance Manual

Manual: 02-9245ME | April 2022





### Parker Instrumentation Products Divison (IPD)

Live Chat Support is available from <a href="https://www.parker.com/IPD">www.parker.com/IPD</a> when the Chat icon " is visible on screen.

Model #	Order #
Serial #	Mfg. Date
Drawing #	Complete information above for future reference.



FAILURE, IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS AND/OR SYSTEMS DESCRIBED HEREIN OR RELATED ITEMS CAN CAUSE DEATH, PERSONAL INJURY AND PROPERTY DAMAGE.

This document and other information from Parker Hannifin Corporation, its subsidiaries and authorized distributors provide product and/or system options for further investigation by users having technical expertise. It is important that you analyze all aspects of your application and review the information concerning the product or system in the current product catalog.

Due to the variety of operating conditions and applications for these products or systems, the user, through its own analysis and testing, is solely responsible for making the final selection of the products and systems and assuring that all performance, safety and warning requirements of the application are met.

The products described herein, including without limitation, product features, specifications, designs, availability and pricing, are subject to change by Parker Hannifin Corporation and its subsidiaries at any time without notice.

ALL PARKER VALVES MUST PASS A RIGID OPERATIONAL AND LEAKAGE TEST BEFORE LEAVING THE FACTORY. IT IS RECOMMENDED AFTER ANY REASSEMBLY. THE VALVE SHOULD BE TESTED BY THE USER FOR OPERATION AND LEAKAGE. IF THESE INSTRUCTIONS ARE NOT FULLY COMPLIED WITH, THE REPAIRED PRODUCT MAY FAIL AND CAUSE DAMAGE TO PROPERTY OR INJURY TO PERSONS. PARKER HANNIFIN CANNOT ASSUME RESPONSIBILITY FOR PERFORMANCE OF A CUSTOMER SERVICED VALVE.

2




Product	<b>Drawings</b>
---------	-----------------

	Typica	al Pump Cross Sectional View4
	ACHL	Pump Dimensional View5
Operation	on & M	laintenance Information
	1.0	Introduction
	2.0	Meaning of Safety Words6
	3.0	Product Specification6
	4.0	Unpacking6
	5.0	Tools6
	6.0	Installation
	6.1	Compressed Air Supply
	6.2	Liquid Section
	7.0	Pump Start-Up
	8.0	Process Media9
	9.0	Pump Functionality
	10.0	Suggested Maintenance
Troubles	shootii	ng Information
	11.0	Repair Kit Options
	12.0	ACHL Series Drawings12
	13.0	Trouble Shooting-Pneumatic Section
	14.0	Trouble Shooting-High Pressure, Liquid Section
	1E O	Comice



# Typical Pump: Cross Sectional View (ASL Pump Shown)

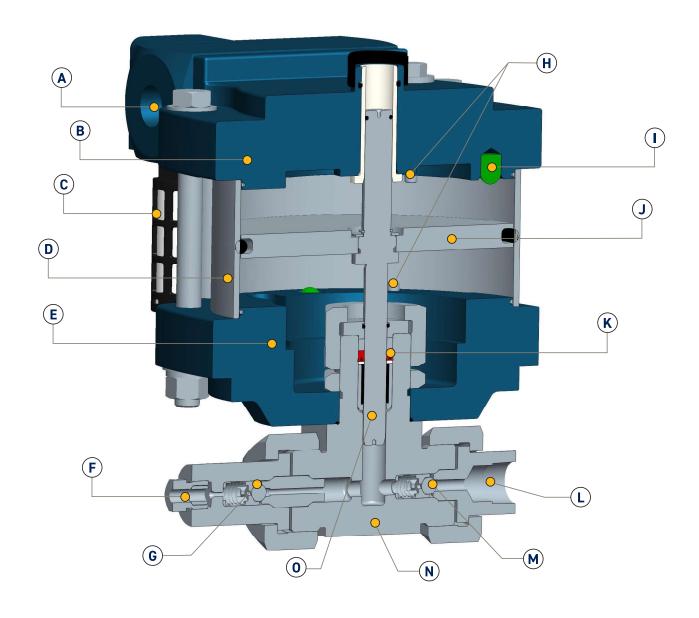


	Description					
Α	Air Inlet					
В	Top End Cap					
С	Air Muffler					
D	Air Cylinder					
Е	Bottom End Cap					
F	High Pressure Outlet Connection					
G	Outlet Check Valve					
Н	Pilot Valve					


	Description					
ı	Air Piston Bumper					
J	Air Piston					
K	High Pressure Seal Assembly					
L	Liquid Inlet Connection					
М	Inlet Check Valve					
N	Pump Head Body					
0	Hydraulic Plunger					





# **ACHL Pump Dimensional View**

All ACHL Series Pumps have a 1/4" FNPT regulated main air drive supply connection

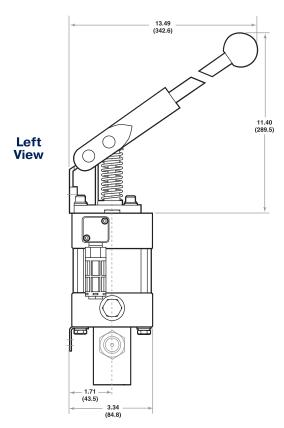

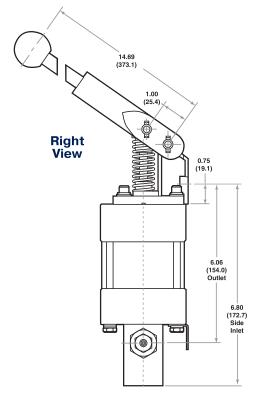

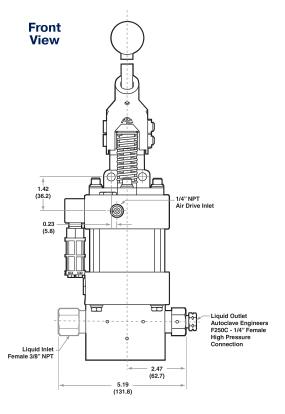

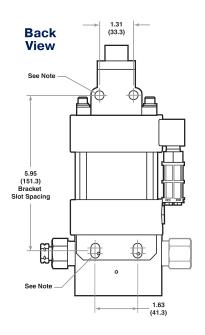

#### Note:

- $\bullet$  Each Mounting Bracket includes (2) 11/32" (8.73) holes for 5/16" Bolts.
- Spool air tubing not shown for clarity.
- ${\boldsymbol \cdot}$  All dimensions are for reference only and are subject to change without notice.
- Primary Dimensions: Inches
- · Secondary Dimensions: (Millimeters)



### **Operation & Maintenance Information**

# Section 1.0 Introduction

The Parker Autoclave Engineers pump discussed in this manual is operated using compressed air up to 150 psi (10 bar). Parker Autoclave Engineers ACL Series pumps are used for pumping oil, water and oil/water mixtures. Special seals are also available for chemical service. Please contact Parker Autoclave Engineers to discuss availability of special seals. The pump operates using a pressure ratio of the air piston surface area to the liquid plunger surface area.

(Output liquid pressure = actual pump pressure ratio x input air pressure). Refer to the product literature for each pump model's actual air pressure ratio.

# Section 2.0 Meaning of Safety Words

A safety related message is identified by a safety alert symbol and a signal word to indicate the level of risk involved with a particular hazard. The definitions of the three signal words are as follows:

# **WARNING**

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

# **A** CAUTION

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

Special notes intended to bring attention to procedures that must be followed to ensure proper installation and performance will be placed in a box labeled **NOTICE**.

# Section 3.0 Product Specifications

See assembly drawing for product specifications:

- Pump Geometry
- Pump Materials of Construction
- Maximum Allowable Working Pressure
- Maximum Working Temperature
- Pressure Ratio
- Displacement
- Repair Kit Part Numbers
- Torque Information
- Weights

# Section 4.0 Unpacking

The pump has been assembled and pressure tested at Parker Autoclave Engineers and is ready to be put into service. The shipping carton should be opened and the contents carefully examined upon receipt from the carrier. Make sure there is no obvious damage to the contents. **DO NOT** use the equipment if any damage is evident. If damage has occurred, file a claim with the shipper before contacting Parker Autoclave Engineers Service Department.

Examine all material within the container and check against the packing list to be sure all items are accounted for and are not damaged. Verify that the equipment model number supplied agrees with what was ordered.

### Section 5.0 Tools

At minimum, the tools required for installation of the pump include a torque wrench, an open end wrench adapter (crows foot adapter) and an open end adjustable wrench.

Refer to the Tools, Maintenance and Installation Manual provided with the Data Book for information on torque wrenches and torque values for Parker Autoclave Engineers tubing and fittings.



## Section 6.0 Installation

#### WARNING

Please read this manual in its entirety before attempting to operate an Parker Autoclave Engineers high pressure liquid pump



#### **WARNING**

Installation to be performed only by properly trained individuals.



### **WARNING**

Proper protective safety gear must be worn while installing and operating the pump.

For best performance and life, the pump should be installed in the vertical position. This will prevent side loading on the air piston seals. The pump will, however, function in any position.

The pump will attach to the mounting location using (4) 5/16" bolts. There are 4 holes provided on each pump for mounting.



### **WARNING**

Always bolt the pump to a substantially solid surface using the slotted holes provided.



### CAUTION

AFL Pumps have a maximum sound level of 85 dBA. Wear hearing protection while working with or near the pump.

# Section 6.1 Compressed Air Supply

#### **NOTICE**

Unless otherwise noted, all air line accessories for the pump air drive should have, at minimum, a 1/4" FNPT connection. The tubing/piping used to connect the components should have the maximum ID the pressure rating will allow. Reducing the size before the air inlet will reduce air pressure flow and reduce flow rate of the pump.

The main air drive connection port on the pump is a female 1/4" FNPT and is located in the spool valve housing.

#### NOTICE

The use of an air line lubricator is not required and is not recommended. The oil in the air lubricator will cause the factory installed grease to be purged from the pump. Once an air lubricator is used the pump can never again be operated without an air lubricator.

An air line filter with a minimum 5 microns filtration rating must be used on the supply line. If the air supply is not dry, a mist separator must be used to remove moisture in the air line.

The pump is designed to function from 15 psi to 150 psi (1 to 10 bar) air input pressure.



# Section 6.2 Liquid Section

All ACHL series pumps have a high pressure liquid outlet port located on the side of the pump head. The suction inlet port on all ACHL series pumps is positioned either at the bottom or side of the head depending on the model purchased. See order code details in the product literature for catalog number suffix.

**Inlet:** A liquid filter with at least a 100 mesh size must be installed before the suction port inlet to prevent damage to the check valves and high pressure seals due to debris.

#### **NOTICE**

For best performance, a liquid supply reservoir should be located higher than the inlet gland on the pump to create a small pressure head. Be sure to make an air tight seal between the reservoir and the pump inlet connection. The connections between the reservoir and pump inlet should not be reduced from the 3/8" FNPT connection size.

The tubing or piping should be made from a corrosion resistant material and sized with a maximum ID to fit the 3/8" pipe connections.

#### **NOTICE**

Restricting flow at the liquid inlet will cause problems with check valve performance and reduce output flow.

**Outlet:** The outlet tubing ID must, at minimum, match the same size of the pump check valve gland port. Refer to product literature for outlet connections details for each pump. Reducing outlet tubing or connection will reduce output liquid flow capacity.



#### **WARNING**

The high pressure tubing must be rated to at least the maximum pump output pressure.




#### **WARNING**

Verify liquid pressure system is protected with an over pressure relief device.



# Section 7.0 Pump Start-Up

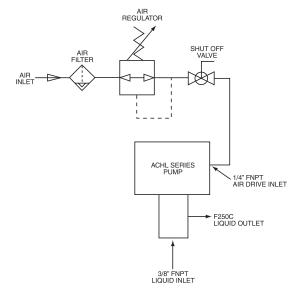

Air Line Schematic

As shown above, a filtered main air supply line is required. The filtered air supply will go to a pressure regulator which can be set to achieve the desired output liquid pressure according to the pressure ratio of the pump.



#### WARNING

Use an air pressure regulator to assure maximum air drive pressure listed on the pump label is not exceeded. An air pressure regulator must also be used to assure the pump will not exceed maximum liquid output pressure listed on the pump label.



#### **WARNING**

The pump and high pressure liquid system must be vented prior to installation and start-up.

The pumps unique design allows for self priming. To prime, regulate the air pressure to between 5-15 psi or use an air flow regulator to reduce to a slow stroke frequency. With the high pressure side connected to a vented system, allow the pump to cycle till a consistent flow of liquid is achieved.

Let the pump flow freely to purge any air in the liquid system. Loosening the outlet gland or pipe can also assist in priming the pump.

## **WARNING**

**DO NOT** exceed the maximum liquid pressure and temperature rating specified on the assembly drawing and label for your pump.

It is recommended to use a liquid relief valve or rupture disk to prevent over pressurization of your high pressure system.

**DO NOT** exceed the maximum air drive pressure listed on your pump label.

### Section 8.0 Process Media

Parker Autoclave Engineers pumps discussed in this manual are used for pumping oil, water and oil/water mixtures. Special seals are also available for chemical service. Please contact Parker Autoclave Engineers to discuss availability of special seals.

### **WARNING**

While testing has shown o-rings to provide satisfactory service life, actual life will vary widely with differing service conditions, properties of reactants, pressure and temperature cycling and age of the o-ring.

FREQUENT INSPECTIONS SHOULD BE MADE to detect any deterioration and o-rings replaced as required.



### **WARNING**

The user is required to verify material compatibility with fluid based on corrosion resistance. A material list is provided on the assembly drawing to aid you in the evaluation.

Pumps are not designed to run for long periods of time without liquid process media. Short, dry pumping cycles should not be a cause for concern. However, pumps are built using lubricant in the seal areas and pumping without fluid will wear away lubricant and compromise the seal.

The operating temperatures of the pump are between 0°F to 140°F (18°F to 60°F).



# Section 9.0 Pump Functionality

When the pump is installed, regulated air is connected to the spool housing at the  $\frac{1}{4}$ " FNPT pump inlet. The explanation below assumes pump is already primed with liquid.

- 1. The pump is supplied with the piston in the upward position, which keeps the pilot valve in the open position.
- 2. When regulated air is supplied to the pump, it enters the spool housing and energizes the large end of the spool, which shifts the spool to the left.
- 3. The shifting of the spool causes regulated air to pass through the spool valve and pushes the air piston and liquid plunger downward toward the pump head.
- 4. The liquid plunger moving toward the head compresses fluid and forcing the inlet check valve to close and the outlet check valve to open.
- 5. The plunger continues in the downward motion until it reaches the full stroke length.
- 6. At the end of the stroke, air pressure is released from the large side of the spool, which causes the spool to shift and exhaust the air from the top of the piston through the muffler.
- 7. The spring underneath the piston then returns the piston to the starting position.
- 8. During the return, the pump performs a suction stroke. During a suction stroke, the plunger is moving away from the head causing the inlet check valve to open, which allows liquid to be drawn into the head while the outlet check valve is forced closed.
- 9. Once the pump returns to the original starting position, the pilot valve opens and the entire process will continue to repeat until the pump reaches its stal pressure.

**Note:** The ACHL series pump can be operated using a manual hand lever.



Air drive pressure must be vented off from pump before using the manual hand lever.

Push the hand lever down to manually compress fluid and build liquid pressure. You can either stop when you reach your desired pressure, or when the pump reaches the end of its stroke. At the end of the stroke, keep your hand on the hand lever and slowly allow the springs to return the pump hand lever to its original position and perform a suction stroke.

Do not let go of handle until the springs have returned the hand lever to its original position.

Repeat this action until desired output pressure is reached.



Do not exceed Maximum Operating Pressure of the pump.



10

# Section 10.0 Suggested Maintenance

# **WARNING**

All pumps must be inspected periodically in order to assure proper and safe operating condition.

Failure to inspect pump can result in serious and catastrophic harm to personnel and the surrounding facility.

- A. Before each pump use, a quick inspection should be performed to insure there are no loose bolts, nuts, set screws or check valve glands. Tighten any loose bolts and fittings according to the torque values listed on the pump assembly drawing. A visual inspection should also be made before each use and at startup to make sure there is no evidence of fluid leaks from bottom end cap, weep holes or check valves. Refer to the troubleshooting guide for solutions to these fluid leaks.
- B. The maintenance schedule of the pump depends on the frequency of use, cleanliness of media, type of media, cycle rates, output pressures, cleanliness of air or any other conditions that may be damaging to seal integrity.

Once a clear pattern develops of how long a pump is in service before pump performance declines, it is recommended to perform

maintenance in advance of this time frame. At minimum, perform maintenance on the pump once a year as described below.

#### Maintenance would include:

- Re-lubrication or replacement of spool valve o-ring
- Re-lubrication or replacement of air drive seals
- Re-lubrication or replacement of pilot valve o-rings and gaskets
- · Replace check valve components
- Replace high pressure hydraulic seals
- C. Maintenance instructions are supplied with appropriate rebuild kits. Kit part numbers are listed on the assembly drawing.



Before attempting to disassemble the pump or loosen fittings in a pressure system, be sure that liquid pressure has been totally vented.

# **WARNING**


Before attempting to perform maintenance on the pump, assure that air supply pressure is shut off and vented from the pump.

# Section 11.0 ACHL Series Repair Kit Options

Pump Model Number	O-Ring Material	Spool Valve Kit	Pilot Valve Kit	Air Drive Kit	Hydraulic Seal Upper	Inlet Check Valve Kit	Outlet Check Valve w/Seal	Full Rebuild Kit
ACHL72-01SNP	None	RS-ACHL	RP-ACHL	RA-ACHL-01N	RH-ACHL72-P	RC-9	RC-8	RF-ACHL72-01NP
ACHL189-01SNP	None	RS-ACHL	RP-ACHL	RA-ACHL-01N	RH-ACHL189-P	RC-9	RC-8	RF-ACHL189-01NP



# Section 12.0 ACHL72-01-N Series Pump Drawing

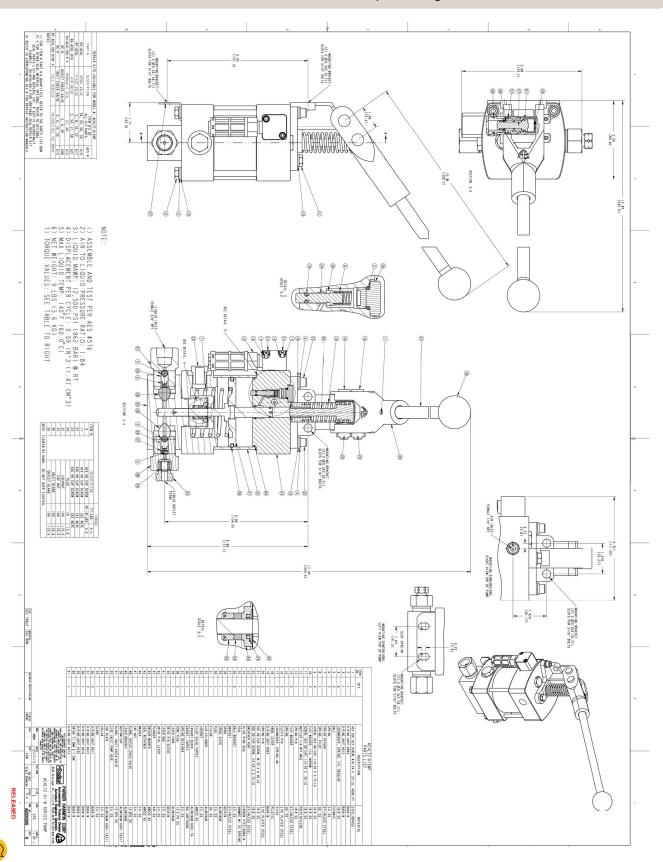

## **Troubleshooting**

# Section 13.0 Troubleshooting - Pneumatic Section

Problem: Pump will not operate with low air pressure.

Cause: Excessive friction of o-rings on the spool

valve has increased the pressure required

to move spool.

Solution: Replace and lubricate the o-rings on spool

Problem: Pump can only be actuated at high air

pressure.

a) Air is leaking through the plunger bore in Cause:

the top end cap.

b) Air is leaking through the o-rings between the top end cap and air cylinder.

c) Bottom cap breather vent clogged.

Solution: a) Replace and lubricate o-rings on upper

plunger and in the bore located in the

top cap.

b) Replace and lubricate o-ring on lip of top

end cap.

c) Clean or replace breather vent.

Problem: Pump will not run and air escaped through

the exhaust muffler.

Cause: a) Spool valve o-rings are leaking.

b) Spool sleeve o-rings are leaking.

**Solution:** a) Replace and lubricate spool valve o-rings.

b) Replace and lubricate sleeve o-rings.

Problem: Pump will not run and air escapes through

the breather vent in the bottom end cap

Cause: a) Outside o-ring on air piston is leaking.

b) Seal between air piston and liquid

plunger is leaking.

**Solution:** a) Replace and lubricate air piston o-ring.

b) Add Loctite 2760 thread locker with sealant

on the plunger threads (one piece

plunger designs).

Problem: Pump operates at a high frequency and

short strokes.

Cause: a) The top pilot valve is defective

b) Air is leaking through the piston bore in the

top end cap.

**Solution:** a) Replace and lubricate both tappet gaskets

and o-ring. If necessary, also replace the

tappet rod.

b) Replace and lubricate o-ring on upper

plunger and in the bore located in the

top cap.

Problem: Pump functions slowly or doesn't operate

14

Cause: a) Condensation from air supply is freezing

the spool valve.

b) Air muffler is clogged.

Solution: a) Stop pump for a short period and replace

or add a mist separator in the air line.

b) Clean or replace air muffler



# Section 14.0 Troubleshooting - High Pressure, Liquid Section

Problem: Pump does not produce liquid flow, operates irregularly or does not maintain pressure.

Cause: a) Air in the hydraulic system.

- b) Suction line excessively long.
- c) Suction tubing sized too small.
- d) Failure of one of the check valves.
- e) Liquid inlet filter is blocked.
- f) High pressure seal excessively worn.
- g) Supply liquid pressure head too low.

- Solution: a) Check inlet suction line and connections for leaks and allow pump to flow freely downstream so as to remove any air.
  - b) Shorten liquid supply line.
  - c) Increase tubing ID size between reservoir and pump inlet.
  - d) Clean or replace both inlet and outlet check valve assemblies.
  - e) Clean or replace liquid inlet filter.
  - f) Replace high pressure seal assembly.
  - g) Raise liquid reservoir to higher location until pump is fully primed.

Problem: Fluid escapes through the breather vent.

Cause: High pressure seal is leaking.

Solution: a) Clean fluid from air section.

- b) Replace and lubricate o-rings as necessary in the air section
- c) Replace high pressure liquid seal assembly.

### Section 15.0 Service

Parker Autoclave Engineers now require all pump repair be sent to an authorized repair facility. Contact Parker Autoclave Engineers for recommendations.

Pumps returned for service should be accompanied with the model number, serial number, manufacture date and problems you are experiencing.

# WARNING

Use only originally specified parts when installing or maintaining high-pressure equipment and follow all Parker Autoclave Engineers maintenance and assembly procedures. Do not use any parts from other equipment to make repairs or modifications. Contact Parker Autoclave Engineers with any questions or if sufficient information to complete the installation, maintenance and operation of the equipment has not been included.



# Parker's Motion & Control Technologies

At Parker, we're guided by a relentless drive to help our customers become more productive and achieve higher levels of profitability by engineering the best systems for their requirements. It means looking at customer applications from many angles to find new ways to create value. Whatever the motion and control technology need, Parker has the experience, breadth of product and global reach to consistently deliver. No company knows more about motion and control technology than Parker. For further information call 1-800-C-Parker.

MARKET		KEYMA	ARKETS	KEY PRODUCTS			
*	AEROSPACE	Aircraft Engines Commercial Commerical Transports Military Aircraft Regional Transports	Business and General Aviation Land-Based Weapons Systems Missiles and Launch Vehicles Unmanned Aerial Vehicles	Flight Control Systems & Components Fluid Conveyance Systems Fluid Metering Delivery & Atomization Devices Fuel Systems & Components	Hydraulic Systems & Com- ponents Inert Nitrogen Generating Systems Pneumatic Systems & Com- ponents Wheels & Brakes		
	CLIMATE CONTROL	Agriculture Food, Beverage and Dairy Precision Cooling Transportation	Air Conditioning Life Sciences & Medical Processing	Co2 Controls Electronic Controllers Filter Driers Hand Shut-Off Valves Hose & Fittings	Pressure Regulating Valves Refrigerant Distributors Safety Relief Valves Solenoid Valves Thermostatic Expansion Valves		
	ELECTRO- MECHANICAL	Aerospace Life Science & Medical Packaging Machinery Plastics Machinery & Converting Semiconductor & Electronics Factory Automation	Machine Tools Paper Machinery Primary Metals Textile Wire & Cable	AC/DC Drives & Systems Electric Actuators, Gantry Robots & Slides Electrohydrostatic Actuation Systems Electromechanical Actuation Systems Human Machine Interface	Linear Motors Stepper Motors, Servo Mo- tors Drives & Controls Structural Extrusions		
Lici III	FILTRATION	Food & Beverage Life Sciences Mobile Equipment Power Generation Transportation	Industrial Machinery Marine Oil & Gas Process	Analytical Gas Generators Compressed Air & Gas Filters Condition Monitoring Engine Air, Fuel & Oil Filtration & Systems	Hydraulic, Lubrication & Cool- ant Filters Process, Chemical, Water Microfiltration Filters Nitrogen, Hydrogen & Zero Air Generators		
	FLUID and GAS HANDLING	Aerospace Agriculture Bulk Chemical Handling Construction Machinery Food & Beverage Fuel & Gas Delivery	Industrial Machinery Mobile Oil & Gas Transportation Welding	Brass Fittings & Valves Diagnostic Equipment Fluid Conveyance Systems Industrial Hose	PTFE & PFA Hose, Tubing & Plastic Fittings Rubber & Thermoplastic Hose & Couplings Tube Fittings & Adapters Quick Disconnects		
	HYDRAULICS	Aerospace Aerial lift Agriculture Construction Machinery Forestry	Industrial Machinery Mining Oil & Gas Power Generation & Energy Truck Hydraulics	Diagnostic Equipment Hydraulic Cylinders & Ac- cumulators Hydraulic Motors & Pumps Hydraulic Systems Hydraulic Valves & Controls	Power Take-Offs Rubber & Thermoplastic Hose & Couplings Tube Fittings & Adapters Quick Disconnects		
	PNEUMATICS	Aerospace Conveyor & Material Handling Factory Automation Life Science & Medical	Machine Tools Packaging Machinery Transportation & Automotive	Air Preparation Brass Fittings & Valves Manifolds Pneumatic Accessories Pneumatic Actuators & Grip- pers Pneumatic Valves & Controls	Quick Disconnects Rotary Actuators Rubber & Thermoplastic Hose & Couplings Structural Extrusions Thermoplastic Tubing & Fittings Vacuum Generators, Cups & Sensors		
	PROCESS CONTROL	Chemical & Refining Food, Beverage & Dairy Medical & Dental	Microelectronics Oil & Gas Power Generation	Analytical Sample Conditioning Products & Systems Fluoropolymer Chemical Delivery Fittings, Valves & Pumps High Purity Gas Delivery Fittings, & Valves & Regulators	Instrumentation Fittings, Valves Regulators Medium Pressure Fittings & Valves Process Control Manifolds		
	SEALING and SHIELDING	Aerospace Chemical Processing Consumer Energy, Oil & Gas Fluid Power General Industrial	Information Technology Life Sciences Military Semiconductor Transportation	Dynamic Seals Elastomeric O-Rings Emi Shielding Extruded & Precision-Cut, Fabricated Elastomeric Seals	Homogeneous & Inserted Elastomeric Shapes High Temperature Metal Seals Metal & Plastic Retained Composite Seals Thermal Management		

#### Parker Worldwide

#### **North America**

USA - Corporate, Cleveland, OH Tel: +1 256 896 3000

USA - IPD, Huntsville, AL Tel: +1 256 881 2040 ipdcct@parker.com

USA - IPD, (Autoclave), Erie, PA Tel: +1 814 860 5700 ipdaecct@parker.com

CA - Canada, Grimsby, Ontario Tel +1 905-945-2274 ipd\_canada@parker.com

#### **South America**

AR - Argentina, Buenos Aires Tel: +54 3327 44 4129 falecom@parker.com

BR - Brazil, Diadema, SP Diadema, SP Tel: +55 11 4360 6700 falecom@parker.com

CL - Chile, Santiago Tel: +56 (0) 2 2303 9640 falecom@parker.com

MX - Mexico, Toluca Tel: +52 722 275 4200 contacto@parker.com

#### **Asia Pacific**

AU - Australia, Dandenong Tel: +61 (0)2 9842 5150 customer.service.au@parker.com

CN - China, Shanghai Tel: +86 21 2899 5000 INGtechnical.china@parker.com

**HK** – Hong Kong Tel: +852 2428 8008

IN - India, Mumbai Tel: +91 22 6513 7081-85

ID - Indonesia, Tangerang Tel: +62 2977 7900 parker.id@parker.com

JP - Japan, Tokyo Tel: +(81) 3 6365 4020 infophj@parker.com

KR - South Korea, Seoul Tel: +82 2 559 0400 parkerkr@parker.com

MY - Malaysia, Selangor Tel: +603 784 90 800 parkermy@parker.com

SG - Singapore Tel: +65 6887 6300 parkersg@parker.com

**TH** – Thailand, Bangkok Tel: +66 2 186 7000 phthailand@parker.com

TW - Taiwan, Taipei Tel: +886 2 2298 8987 enquiry.taiwan@parker.com

VN - Vietnam, Hochi Minh City Tel: +848 382 508 56 parker\_viet@parker.com

#### Europe, Middle East, Africa

AE - UAF Dubai Tel: +971 4 812 7100 parker.me@parker.com

AT - Austria, Wiener Neustadt Tel: +43 (0)2622 23501-0 parker.austria@parker.com

AT - Eastern Europe, Wiener Neustadt Tel: +43 (0)2622 23501 900 parker.easteurope@parker.com

AZ - Azerbaijan, Baku Tel: +994 50 2233 458 parker.azerbaijan@parker.com

**BE/LU** – Belgium, Nivelles Tel: +32 (0)67 280 900 parker.belgium@parker.com

BG - Bulgaria, Sofia Tel: +359 2 980 1344 parker.bulgaria@parker.com

BY - Belarus, Minsk Tel: +48 (0)22 573 24 00 parker.belarus@parker.com

CH - Switzerland, Etoy Tel: +41 (0) 21 821 87 00 parker.switzerland@parker.com

CZ - Czech Republic, Klecany Tel: +420 284 083 111 parker.czechrepublic@parker.com

DE - Germany, Kaarst Tel: +49 (0)2131 4016 0 parker.germany@parker.com

DK - Denmark, Ballerup Tel: +45 43 56 04 00 parker.denmark@parker.com ES - Spain, Madrid Tel: +34 902 33 00 01 parker.spain@parker.com

FI - Finland, Vantaa Tel: +358 (0)20 753 2500 parker.finland@parker.com

FR - France, Contamine s/Arve Tel: +33 (0)4 50 25 80 25 parker.france@parker.com

GR - Greece, Athens Tel: +30 210 933 6450 parker.greece@parker.com

HU - Hungary, Budapest Tel: +36 223 885 470 parker.hungary@parker.com

IE - Ireland, Dublin Tel: +353 (0)1 466 6370 parker.ireland@parker.com

IT - Italy, Corsico (MI) Tel: +39 02 45 19 21 parker.italy@parker.com

KZ - Kazakhstan, Almaty Tel: +7 7273 561 000 parker.easteurope@parker.com

NL - The Netherlands, Oldenzaal Tel: +31 (0)541 585 000 parker.nl@parker.com

NO - Norway, Stavanger Tel: +47 66 75 34 00 parker.norway@parker.com

PL - Poland, Warsaw Tel: +48 (0)22 573 24 00 parker.poland@parker.com PT - Portugal, Leca da Palmeira Tel: +351 22 999 7360 parker.portugal@parker.com

RO - Romania, Bucharest Tel: +40 21 252 1382 parker.romania@parker.com

RU - Russia, Moscow Tel: +7 495 645-2156 parker.russia@parker.com

SE - Sweden, Spånga Tel: +46 (0)8 59 79 50 00 parker.sweden@parker.com

SK - Slovakia, Banská Bystrica Tel: +421 484 162 252 parker.slovakia@parker.com

SL - Slovenia, Novo Mesto Tel: +386 7 337 6650 parker.slovenia@parker.com

TR - Turkey, Istanbul Tel: +90 216 4997081 parker.turkey@parker.com

UA - Ukraine, Kiev Tel: +48 (0)22 573 24 00 parker.ukraine@parker.com

**UK** – United Kingdom, Warwick Tel: +44 (0) 1926 317 878 parker.uk@parker.com

ZA - South Africa, Kempton Park Tel: +27 (0)11 961 0700 parker.southafrica@parker.com

© 2022 Parker Hannifin Corporation | Instrumentation Products Division





1005 A Cleaner Way Huntsville, AL 35805 USA Tel: 256.881.2040 Fax: 256.881.5072

www.Parker.com/IPD

8325 Hessinger Drive Erie, PA 16509 USA Tel: 814 860 5700 Fax: 814 860 5811

www.autoclave.com

02-9245ME

April 2022





**Instrumentation Products Division**